

**TUBE FUNCTION AND LOCATION CHART**  
**TWO/NINETY/TWO**  
**STEREO POWER AMPLIFIER**

Each 12AX7/12AU7 has two sections/functions. Section A is shown first, Section B is second. Factory recommended tubes are listed under each location. Numbering sequence is left to right looking at FRONT of amp starting with the row closest to front panel of amp. Use only 12AX7 or 12AU7 tubes as specified. These cannot be switched between socket locations or substituted for other types.

V1	Input Stage (post volume control).
12AX7 China	Phase Inverter.

V2	Voltage Amp/Driver Stage
12AU7 China	Voltage Amp/Driver Stage

V3	Input Stage (post volume control).
12AX7 China	Phase Inverter.

V4	Voltage Amp/Driver Stage
12AU7 China	Voltage Amp/Driver Stage

V5-V8	Power Tubes
KT88 Sovtek/EH	